

PARTS LIST			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	speaker d 00	Main Frame
2	1	sub 02 0-25	Base Speaker
3	1	top cover s 04	Top Cover
4	2	side cover 02	Side Cover
6	1	Speaker base x 01	Speaker Stand
7	4	2mm bolt	
11	2	Tweeter 17,5mm	Treble
13	12	washer 2mm	
14	12	2 mm nut	
17	1	micro_usb_plug	USB Connection
18	1	3,5mm jack 00	Jack Connection
19	1	micro sd 00	SD Card
20	1	lcd screen x 02	LCD Screen

