

#### MD CONTROL SYSTEM:

THIS IS THE MD CONTROL SYSTEM DESIGNED SPECIFICALLY FOR THE CONTROL OF YOUR VEHICLE VIA SMART PHONE OR IPAD LOCATED ON THE PASSENGER SIDE WALL. THIS CAN BE ACCESSED AT ANY TIME AS LONG AS THE VEHICLE IGNITION IS ON.

## MD CONTROLS



MENU  
NAVIGATE TO ANY PAGE  
DIRECTLY REGARDLESS  
OF CURRENT SCREEN

MD Logo  
PRESS TO RETURN TO  
MAIN SCREEN ON ANY  
PAGE

CLIMATE CONTROL  
NAVIGATE TO CLIMATE  
CONTROL PAGE

AUDIO VIDEO CONTROL  
NAVIGATE TO CLIMATE  
CONTROL PAGE

LIGHTING CONTROL  
NAVIGATE TO LIGHTING  
CONTROL PAGE

SHADE CONTROL  
NAVIGATE TO SHADE  
CONTROL PAGE

SHADE CONTROL  
NAVIGATE TO SHADE  
CONTROL PAGE

 
 
CAMERA CONTROL  
SWITCHES TVs TO  
OUTSIDE CAMERAS



LOUDER  
ADJUST SPEAKER  
VOLUME UP, HOLD DOWN

SOFTER  
ADJUST SPEAKER  
VOLUME DOWN, HOLD  
DOWN

MUTE  
CEASE ALL SOUND FROM  
SPEAKERS, TAP ONCE

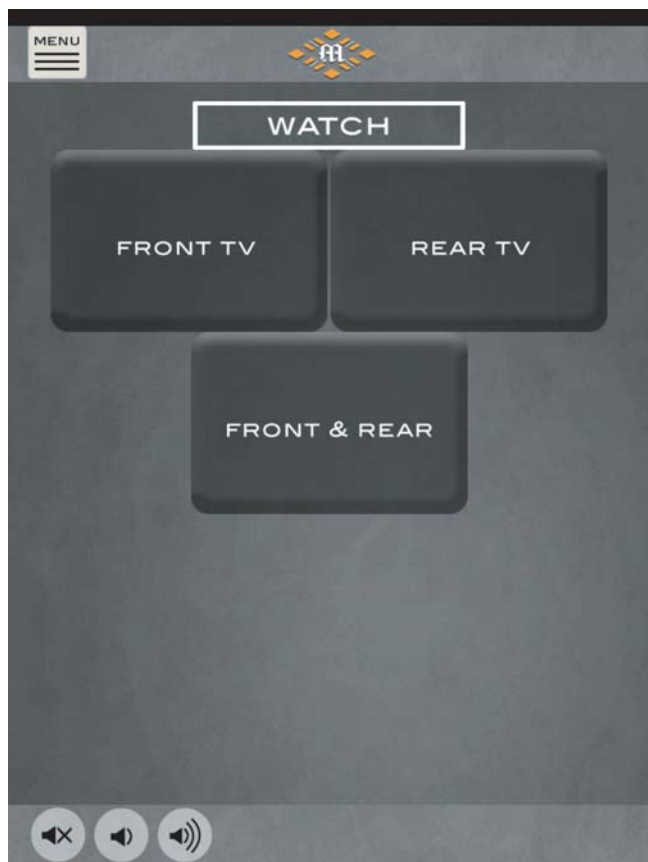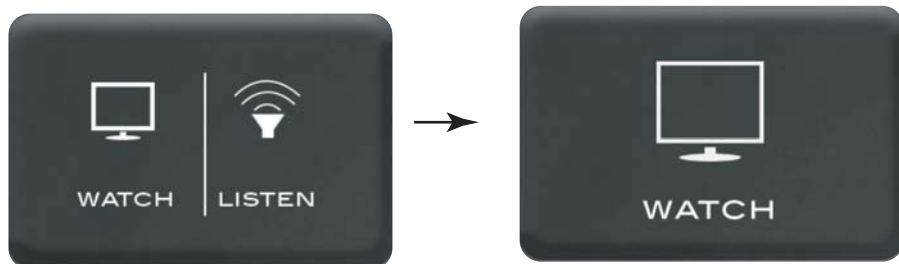

#### WATCH LISTEN / AUDIO VISUAL CONTROLS:

MD WATCH LISTEN CONTROL MENU IS ACCESSED WITH A PRESS OF THE WATCH LISTEN BUTTON LOCATED ON THE MAIN SCREEN. THE CONTROL PAGE IS THEN DIRECTED TO A SUB CATEGORY OF EITHER WATCHING/VISUAL OR LISTEN/AUDIO. FROM THERE, A SELECTION OF EITHER FRONT OR REAR OR BOTH TV'S CAN BE SELECTED. AFTER A SELECTION IS MADE AN INPUT IS THE CHOSEN TO APPLY TO THE TV(S) SELECTED. IF THE WRONG SELECTION IS MADE, PLEASE RETURN TO MAIN MENU THEN REPEAT CORRECT DESIRED SELECTIONS TO OVERRIDE CURRENT DISPLAY.

 
## MD CONTROLS

ENTER BUTTON:  
SELECTS HIGHLIGHTED  
OBJECT ON SCREEN

DIRECTIONAL BUTTON:  
MOVES SELECTION ON  
SCREEN

PLAY/PAUSE:  
PLAYS SELECTION/  
PAUSES/UNPAUSES

MENU:  
USED AS BACK BUTTON  
IN APPLE TV MENU

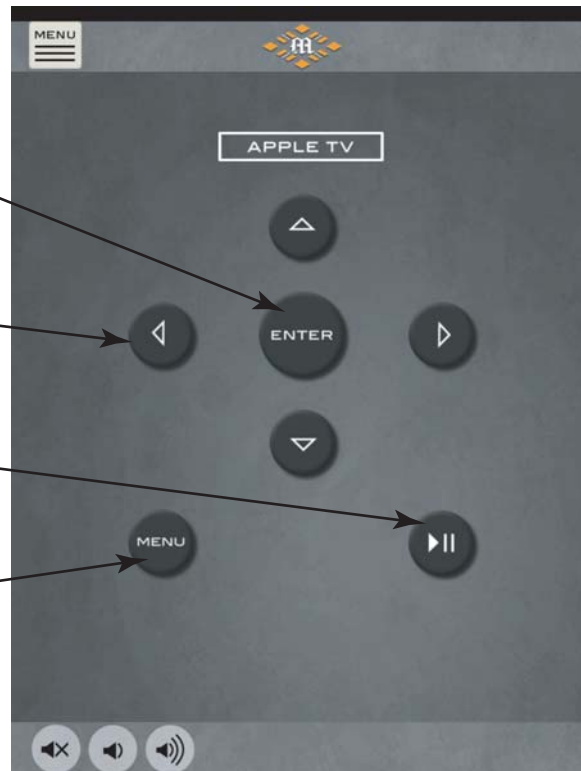

EJECT CURRENT DISC

 
TURN DVD PLAYER ON

MENU:  
USED AS BACK BUTTON  
IN DVD MENU

ENTER BUTTON:  
SELECTS HIGHLIGHTED  
OBJECT ON SCREEN


DIRECTIONAL BUTTON:  
MOVES SELECTION ON  
SCREEN

STANDARD CONTROL  
BUTTONS FOUND ON TV  
REMOTES

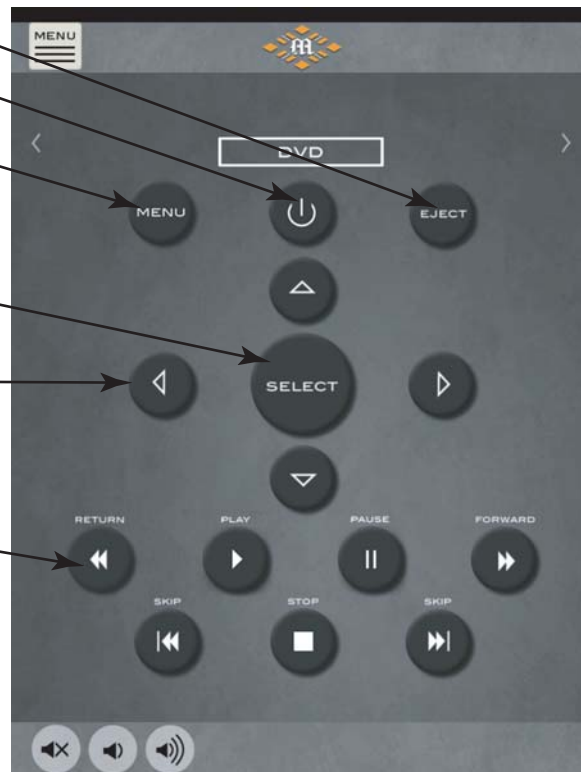

### AUX:

 CONNECTS TO YOUR  
DEVICE THROUGH HDMI  
INPUTS LOCATED ON CON-  
SOLES OR WALL BOARD IF  
EQUIPPED.

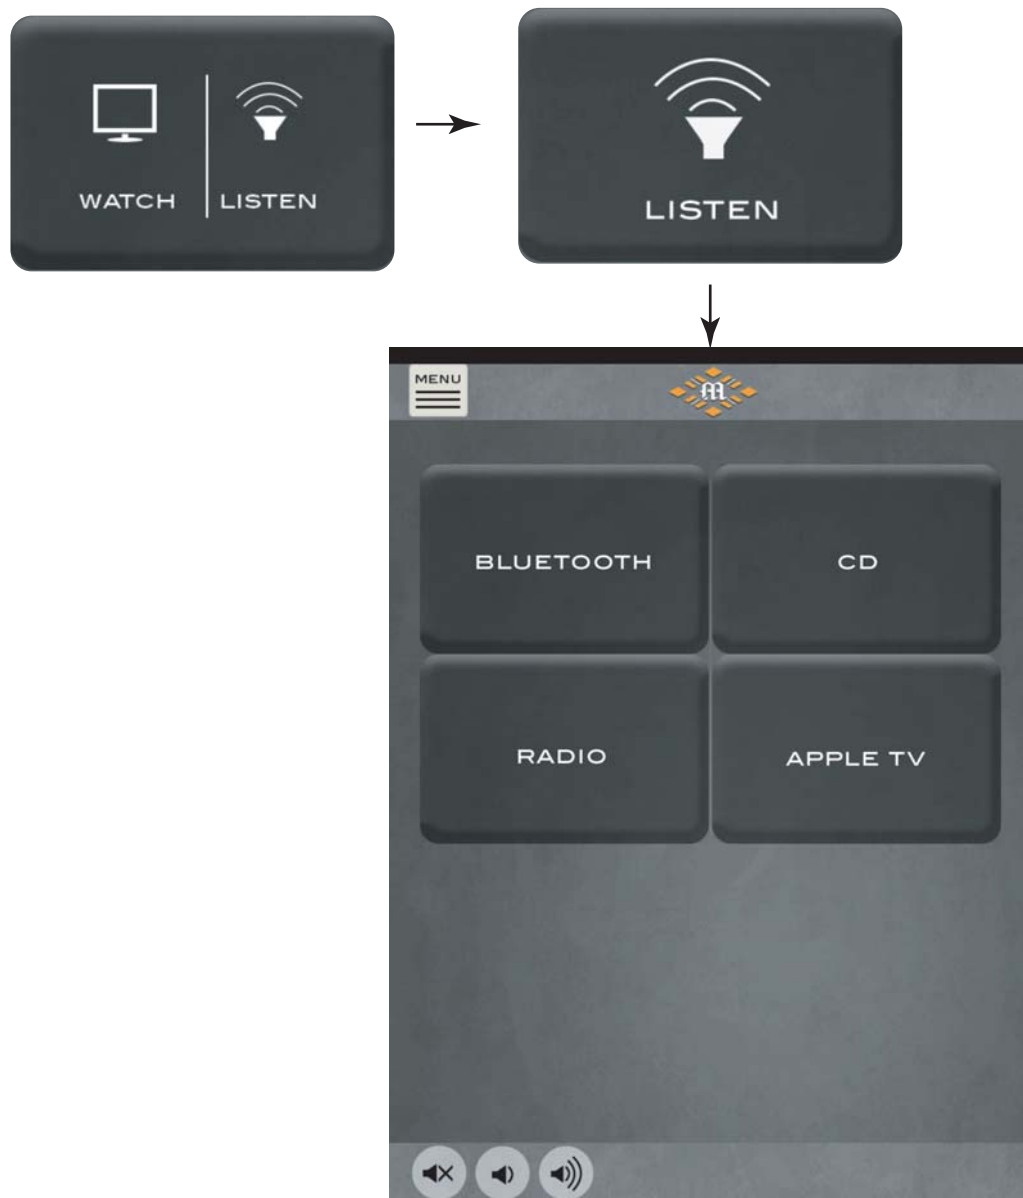

### LISTEN / AUDIO CONTROLS:

LISTEN / AUDIO CONTROLS MENU IS ACCESSED WITH A PRESS OF THE WATCH LISTEN BUTTON LOCATED ON THE MAIN SCREEN. THE CONTROL PAGE IS THEN DIRECTED TO A SUB CATEGORY OF EITHER WATCHING/VISUAL OR LISTEN/AUDIO. FROM THERE, A SELECTION OF EITHER BLUETOOTH, CD, RADIO OR APPLE TV CAN BE MADE. AFTER A SELECTION IS MADE AN A CONTROL MENU CORRESPONDING TO THE CHOICE IS THEN SHOWN. NOTE: THE DVD CONTROL PAGE ALSO FUNCTIONS AS A CD PLAYER.

## MD CONTROLS

### BLUETOOTH CONTROL PAGE:

BLUETOOTH BUTTON:  
CONNECTS TO BLUE-  
TOOTH DEVICE. MAKE  
SURE DEVICE BLUE  
TOOTH DISCOVERY MODE  
IS ENABLED

TV ON OFF BUTTONS:  
TURNS TV ON OR OFF IF  
NO PICTURE IS DESIRED.  
THIS FEATURE ONLY  
APPLIES TO THE LAST  
SELECTED TV.



### CD CONTROL PAGE: EJECT CURRENT DISC

 
TURN DVD PLAYER  
ON/OFF

MENU:  
USED AS BACK BUTTON  
IN DVD MENU

ENTER BUTTON:  
SELECTS HIGHLIGHTED  
OBJECT ON SCREEN

DIRECTIONAL BUTTON:  
MOVES SELECTION ON  
SCREEN

STANDARD CONTROL  
BUTTONS FOUND ON TV  
REMOTES

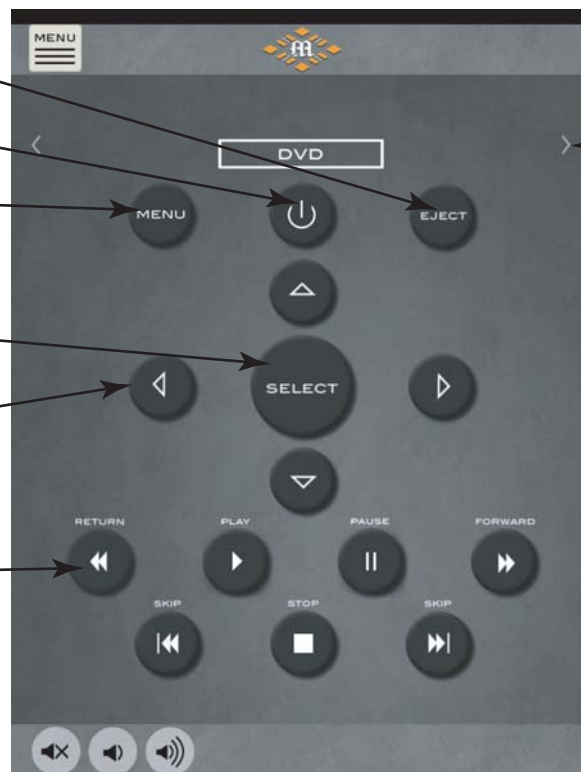

### NOTE:

ONCE UNDER THE LISTEN, YOU  
CAN SWIPE CONTROLS LEFT TO  
RIGHT TO ACCESS DIFFERENT CON-  
TROLS IF SO DESIRED OR USE THE  
ARROWS TO THE LEFT OR RIGHT.

## MD CONTROLS

### RADIO CONTROL PAGE:

**CHANEL BUTTON:**  
CHANGE PRESET STATION  
EITHER UP OR DOWN

**FREQUENCY BUTTON:**  
CHANGES FREQUENCY  
OR AMPLITUDE BASED ON  
AM OR FM BAND

**AUDIO:**  
NAVIGATES TO AUDIO  
TUNING PAGE TO ADJUST  
LEVELS

**BAND:**  
SWITCH BETWEEN  
AM/FM



 
### APPLE TV CONTROL PAGE:

**ENTER BUTTON:**  
SELECTS HIGHLIGHTED  
OBJECT ON SCREEN

**DIRECTIONAL BUTTON:**  
MOVES SELECTION ON  
SCREEN

**PLAY/PAUSE:**  
PLAYS SELECTION/  
PAUSES/UNPAUSES

**MENU:**  
USED AS BACK BUTTON  
IN APPLE TV MENU

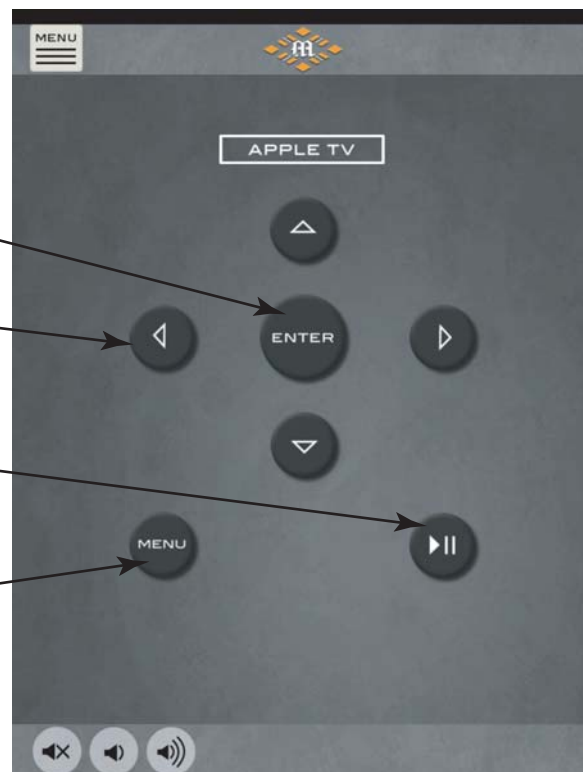


## EMOTIVA CONTROL PAGE:

MENU:  
LAUNCHES EMOTIVA  
MAIN MENUE

ENTER BUTTON:  
SELECTS HIGHLIGHTED  
OBJECT ON SCREEN

DIRECTIONAL BUTTON:  
MOVES SELECTION ON  
SCREEN

 RETURN:  
USED AS BACK BUTTON  
IN EMOTIVA MENU

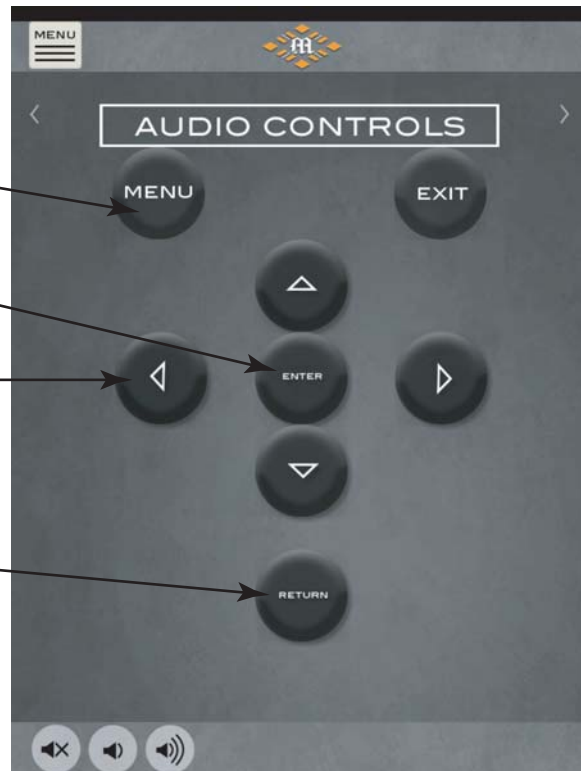

## SOUND CONTROL PAGE:

STEREO MODE:  
UNPROCESSED ANALOG  
PLAYBACK

DIRECT MODE:  
UNPROCESSED SOUND  
DIRECTLY FROM SOURCE

MODE:  
CHANGES DIGITAL  
SURROUND MODE

SUB:  
CONTROLS SUB WOOFER  
VOLUME

 
REAR:  
CONTROLS REAR SPEAK-  
ER VOLUME





**MODE:**  
SWITCH BETWEEN AIR  
CONDITIONING AND HEAT

**AUTO:**  
AUTO MODE ADJUST  
MODE, FAN SPEED, TO  
DESIRED TEMPERATURE  
SET AND MAINTAINS SET  
TEMPERATURE BASED ON  
CONDITIONS

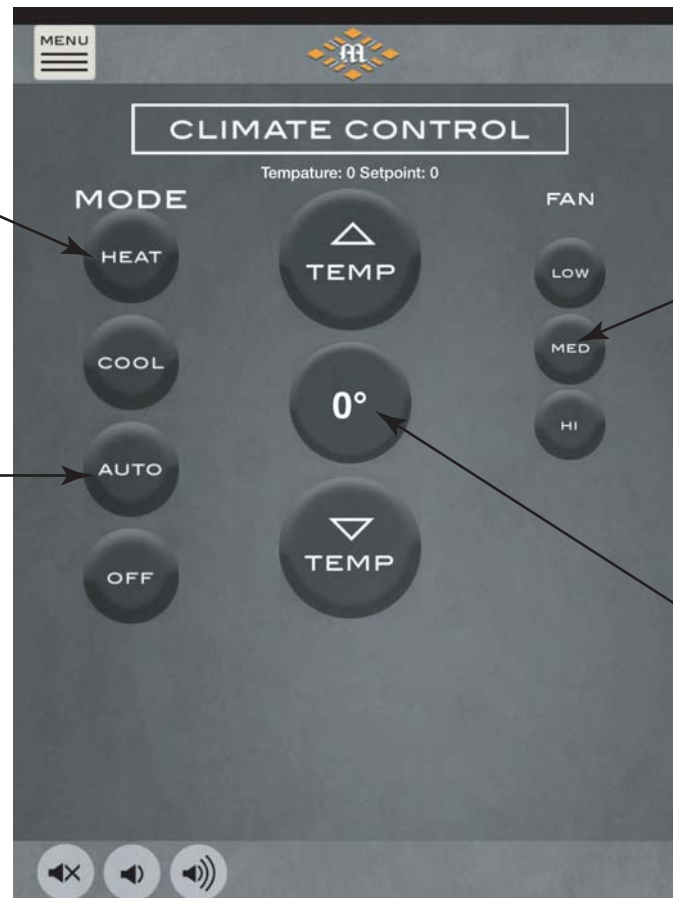

**FAN:**  
SELECT THE FAN SPEED  
MANUALLY WHICH  
REMAINS ON DESIRED  
SPEED REGARDLESS OF  
TEMPERATURE


**TEMPERATURE:**  
CURRENT TEMPERATURE  
SETTING IN THE VEHICLE.  
USE DIRECTIONAL ARROW  
BUTTONS TO INCREASE  
OR DECREASE DESIRED  
TEMPERATURE

### CLIMATE CONTROL MENU:

 MD CONTROLS TIES IN WITH THE CLIMATE CONTROL CENTER LOCATED ON THE PASSENGER SIDE WALL. EITHER CONTROL CAN BE USED AND THE LAST INPUT EITHER THROUGH THE PHYSICAL CONTROL CENTER OR THROUGH THE MD CONTROL WILL OVER RIDE TO THE NEW DESIRED SETTING.

DOME OVERRIDE ON:  
DOME OVERRIDE ALLOWS  
FOR ADDITIONAL LIGHT-  
ING. PLEASE SEE NOTE \*\*

RGB CONTROL:  
NAVIGATE TO RGB CON-  
TROL SCREEN.

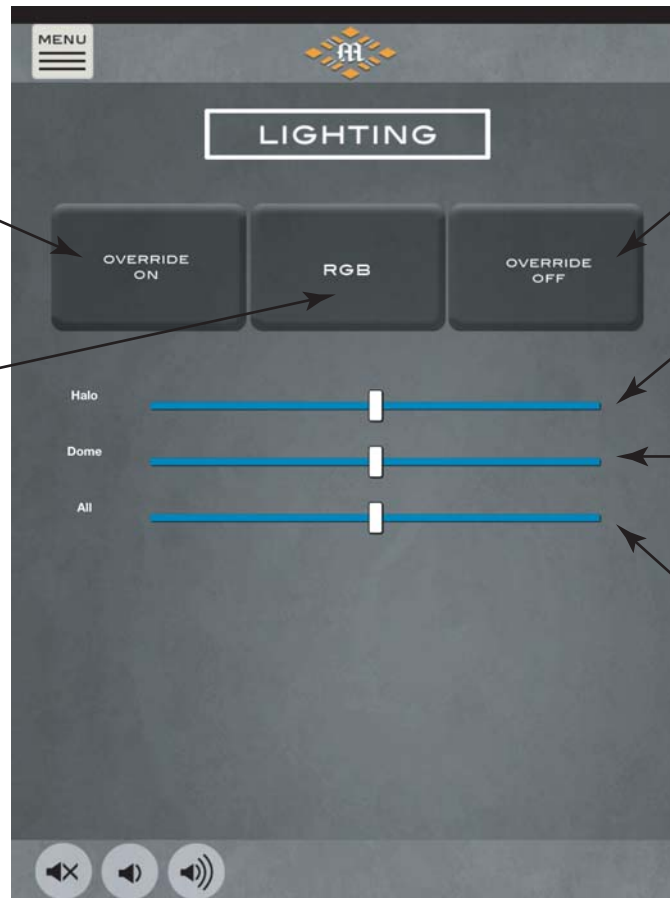

DOME OVERRIDE OFF:  
DOME LIGHTS FUNCTIONS  
NORMALLY WITH DOOR  
OPENING AND CLOSING

HALO:  
ADJUST INTENSITY OF  
HALO LIGHTS ON HEAD-  
LINER

DOME:  
ADJUST INTENSITY OF  
DOME LIGHTS ON HEAD-  
LINER

ALL:  
ADJUST INTENSITY OF  
DOME AND HALO LIGHTS  
ON HEADLINER  
SIMULTANEOUSLY

#### LIGHTING CONTROL MENU:

MD CONTROLS ALLOWS CONTROL OVER THE INTERIOR LIGHTING OF THE REAR CABIN. SOME OF THE LIGHTING FEATURES ARE TIED INTO THE SPRINTER'S MAIN LIGHTING SYSTEM TO TRIGGER CERTAIN LIGHTS TO COME ON OR BE OFF WHEN NOT IN USE.

**\*THIS FUNCTION IS ONLY AVAILABLE WHEN VEHICLE IGNITION IS ON.\***

BRIGHT / DIM:  
ADJUST INTENSITY OF  
SELECTED LIGHT COLOR

COLORS:  
TAP THE DESIRED COLOR  
OF YOUR CHOICE FOR A  
SOLID COLOR LIGHT WITH  
NO TRANSITIONS

PAUSE/PLAY MODE:  
PAUSES OR PLAYS THE  
LIGHT MODE

COLOR MODES:  
MODES EFFECT THE  
TRANSITION OF ONE  
LIGHT TO ANOTHER, TO  
CANCEL, SELECT EITHER  
A SINGLE COLOR, OR THE  
ON OFF SWITCH ABOVE.



## RGB CONTROL MENU:

 
MD CONTROLS ALLOWS FOR YOU TO ADJUST THE COLOR OF YOUR INTERIOR LIGHTING ACCENTS TO YOUR TASTE. TO CHANGE SIMPLY USE THE BUTTONS TO SELECT A SINGLE LIGHT. THE USER CAN ALSO APPLY LIGHT PATTERNS SUCH AS FLASHING, STROBE, FADE, AND SMOOTH WHICH AFFECT THE TRANSITIONS OF THE LIGHTS TO DIFFERENT COLORS. AT ANY POINT THE USER CAN STOP THE LIGHTS AND TURN THEM OFF VIA THE ON OFF BUTTON AT THE TOP.

SHADE SELECTION  
SQUARE:  
TAP SQUARE TO SELECT  
SINGLE DESIRED SHADE

DAY SHADE:  
RAISE OR LOWER DAY  
SHADE TO BLOCK OUT  
ADDITIONAL OUTSIDE  
LIGHT FROM INTERIOR

NIGHT SHADE:  
RAISE OR LOWER NIGHT  
SHADE TO BLOCK OUT  
ALL OUTSIDE LIGHT FROM  
INTERIOR.

ALL:  
SELECT ALL AVAILABLE  
SHADE AT ONCE

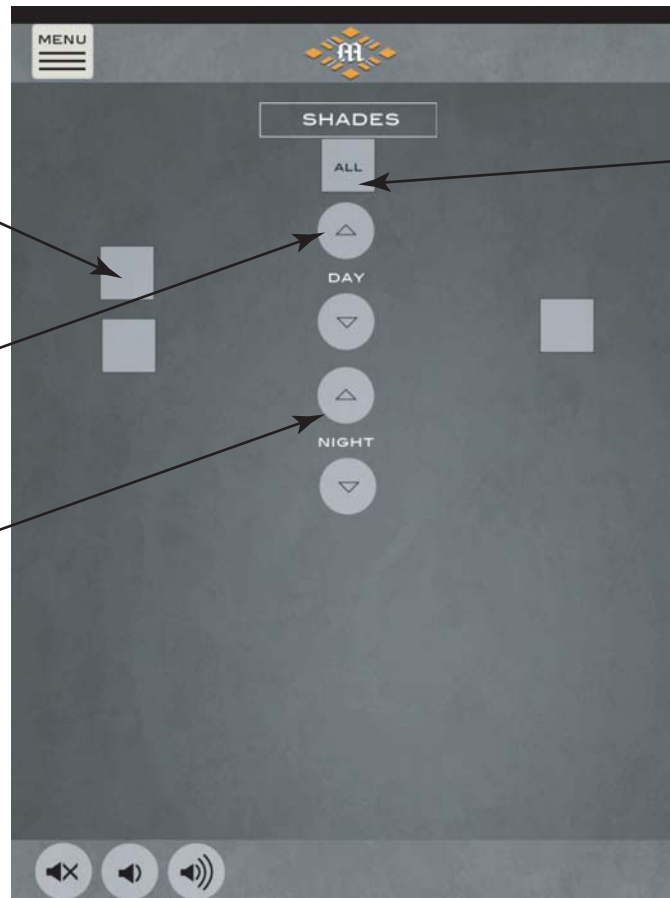


#### SHADE CONTROL MENU:

MD CONTROLS ALLOWS CONTROL OVER THE WINDOW SHADES TO YOUR VEHICLE. THE USER CAN CONTROL EITHER A SINGLE SHADE ONE AT A TIME, OR SELECT ALL SHADES AT ONCE TO PERFORM THE DESIRED OPTION. SHADE SQUARES REPRESENT THE INDIVIDUAL WINDOWS THE USER CAN SELECT ONE AT A TIME.

PARTITION UP:  
FULLY CLOSE PARTITION

 PARTITION DOWN:  
FULLY OPEN PARTITION

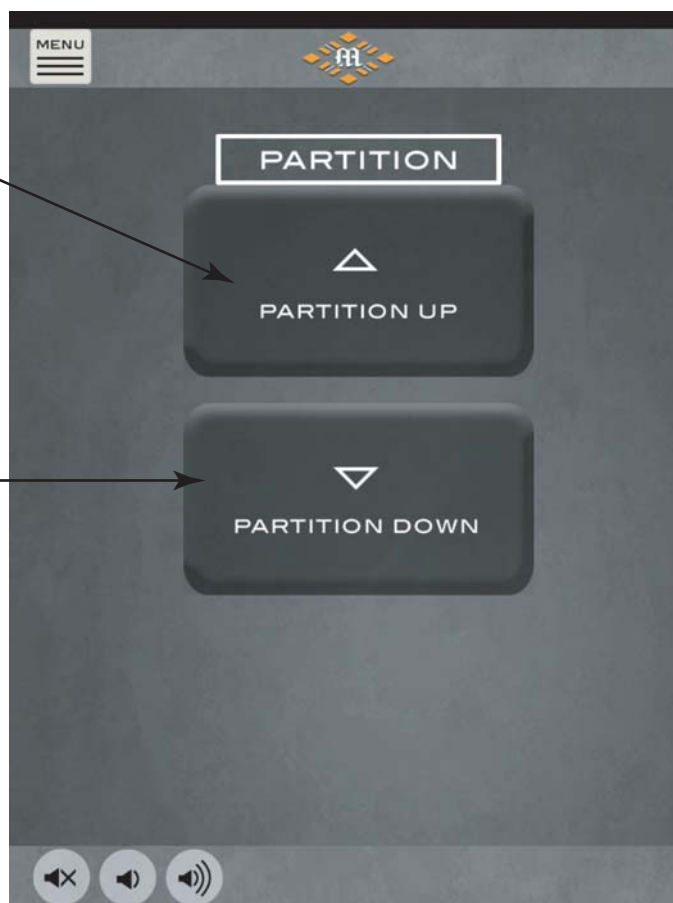

#### PARTITION CONTROL MENU:

MD CONTROLS ALLOWS YOU TO CONTROL THE UP OR DOWN POSITION OF THE PARTITION THROUGH YOUR IPAD OR SMART PHONE DEVICE. SIMPLY TAP THE UP OR DOWN BUTTON TO FULLY OPEN OR CLOSE PARTITION.

**PLEASE MAKE SURE ALL OBJECTS AND PERSONS ARE CLEAR OF THE PARTITION BEFORE USING!**



RETURN:  
RETURN TO MAIN MENU

#### CAMERA CONTROL:

THE MAIN MENU SCREEN WILL DISPLAY A CAMERA BUTTON. TO DISPLAY CAMERAS TAP THE CAMERA BUTTON THEN USE THE ALPINE CAMERA CONTROL LOCATED ON THE CENTER CONSOLE TO NAVIGATE DISPLAYS.