



# Technical Notes

Aristocrat® Technologies, Inc. Technical Notes

## ViewSonic® 42" LCD Power Lock Adjustment

### Issue


The ViewSonic® 42" LCD is factory preset to require a manual reset following a power failure.

### Resolution

Adjusting the factory preset from POWER UNLOCK to POWER LOCK will enable the LCD to resume operation automatically.

### Adjusting the Setting

Step	Description
1.	Press the POWER button (labeled G below) on the LCD Control Panel to turn power ON. The LED Power Indicator turns GREEN.
2.	Press the MENU and VOL + buttons (labeled B & D on the LCD Control Panel) to access the default power setting. POWER UNLOCK appears on the LCD indicating the factory preset.
3.	Repeat Step 2. POWER LOCK appears on the LCD, indicating the adjustment.

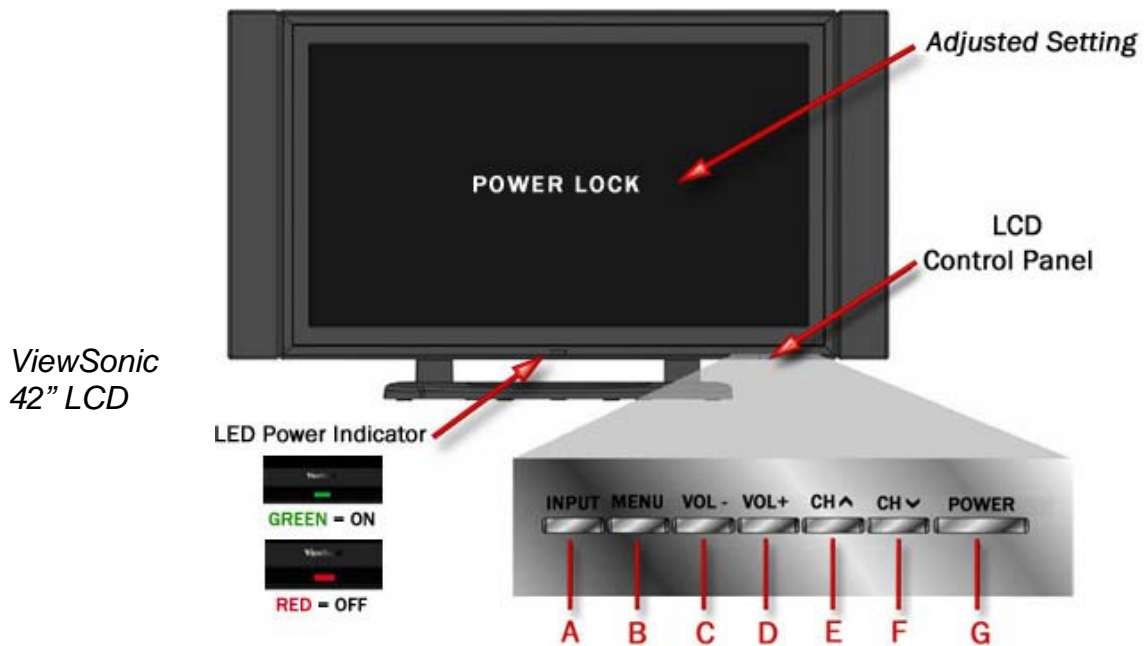

Questions concerning this Technical Note should be directed to the Aristocrat Technologies, Inc., National Service Support Center at 1-800-482-3723 or [ServiceSupport@aristocrat-inc.com](mailto:ServiceSupport@aristocrat-inc.com)