 


How to use a Hydraulic Jack


- WARNING:** Pull the vehicle over and turn it off before changing a tire.
- WARNING:** Do NOT for any reason climb under the vehicle while it is lifted.
- WARNING:** Do NOT for any reason turn the vehicle on while it is lifted.

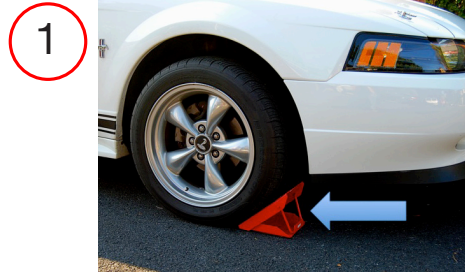

1 Put the vehicle in park or in gear and apply parking brake. Then place the wheel chocks firmly under the other tire on the same side.



2 Loosen, but do NOT remove lug nuts from wheel.

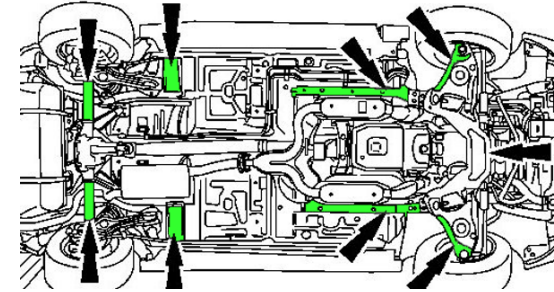

3 Check in your owners manual, or refer to picture for proper jacking points.




4 Place jack under the vehicle and tighten the bleed valve.



5 Raise the vehicle until the tire lifts off the ground.



6 Remove lug nuts and wheel. Place spare tire onto lugs and tighten nuts, but not completely.

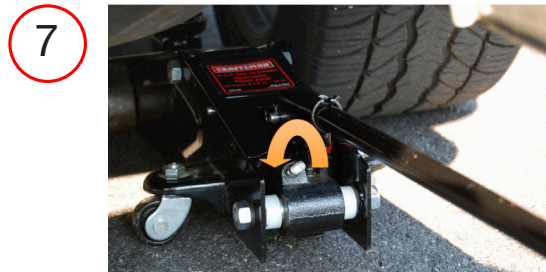

7 Loosen bleed valve slowly until the vehicle is back on ground. Let the jack release completely then remove from under vehicle.



8 Tighten the lug nuts to the appropriate force as specified by the owners manual.



9 Remove the wheel chocks from under the vehicle.



10 You're good to go.