

# Layout Elements... contd.

## Content Carousel

1. Selection Window has a fixed position and will not move.
2. Selection Window will always have 1 channel/content in it and can never have partial images of 2 channel/content at the same time.
3. Genre name will be visible on left edge of screen as long as any content of the bucket is visible on the screen area. This will not scroll with content and will only scroll out with the end of bucket.
4. My Favourites genre will only appear when user has atleast 1 item set as favourite.
5. My Favourites genre, when present will always be the first genre bucket in the carousel, not necessarily in Selection Window.
6. In case where user sets Language filters on page 10 and there is no content for a particular genre with the specified filters, that genre bucket will not appear on the carousel.
7. For a first time user, default position of carousel (what is shown on Selection Window) will be first genre bucket.
8. For a repeat user, the position of carousel (what is shown on Selection Window) will be same state where he was last time on that screen. Even when user moves between menubar sections the position of carousel for each section will be in the same state when he was last in the respective section.
9. When user selects any Genre on Page 9, this carousel will automatically scroll to show the first content of that genre in the Selection Window.
10. The order of genre buckets in the carousel will be based on genre weightage (Mantis #7594).
11. The order of channels/content within a particular genre bucket will be first based on language preferences set by user (optional feature for deployment) followed by channel weightage and/or special services weightage.
12. All genre and channel/content names should be customizable.
13. Points 10 to 12 above should be achievable on the fly without having to do a client upgrade.
14. Tappable areas shown below in Red boxes are representational of area and not part of UI.
15. Fetch info about the channel/content for displaying in the player window only when the carousel stops on a particular channel/content. While scrolling the player window can show a product logo.
16. Adding any channel/content to My Favourites will not remove it from its original bucket but will create a copy of same channel/content inside My Favourites bucket. When removing channel/content from My Favourites, it will only remove it from My Favourites bucket.
17. In case of Special Service types, there will be circle based filtering (if applicable). (Mantis #6226)
18. In case of Special Service types, admin will have flexibility to pre-schedule the go-live and expiry of special service type. (Mantis #6023)
19. In case of Special Service types having multiple types of content (i.e. Live and VOD), the admin should have flexibility to define weightage (order) of the content type buckets.
20. In case user is not subscribed to any channel/content and user selects "Show only my subscribed channels/content", give a message to user on the carousel as shown in "No subscribed channels" box below.
21. Refer to "Carousel Content Loading" box below for showing loading content in the carousel items.
22. When user sets Language filters on page 10, if there is a group of videos/content having multiple languages, hide this group only when none of its contents is in the selected languages.

• Selection Window  
• No Action

• Channel/content in Selection Window

• User Action & System Response:

1. \*\* If there is a '+' icon on channel, Tap  
\*\* Show Touch Feedback and proceed to relevant pages
2. \*\* Else, No Action

• Genre Name  
• No Action

• Indicator for channel/content already playing  
• No Action

• Genre Bucket  
• No Action

• Icon to browse all content of this channel  
• Tap  
• Show Touch Feedback and proceed to relevant pages

• Option to toggle between subscribed and all channels/content  
• Tap  
• Show Touch Feedback and toggle between checked/unchecked states. When this is checked, the carousel will show only channels/content user is subscribed to.

• Highlight for channelcontent already playing

• User Action & System Responses

1. \*\* Tap  
\*\* Move this channel/content to Selection Window
2. \*\* Swipe Horizontally  
\*\* Move carousel left/right (one item at a time) thereby moving channels/content in/out of Selection Window and screen
3. \*\* Flick Horizontally  
\*\* Move carousel left/right (fast - default Flick speed of Android) thereby moving channels/content in/out of Selection Window and screen

## Page 4. Live TV - OSD Expanded



### General Notes:

1. User should be able to scroll this screen up/down by swiping or flicking on the screen (not including System Bar, Header and Menu Bar).
2. Pressing Back button of the device or soft key back button (in case of newer devices) will take the user to Page 74.
3. In case EPG of channel in selected window is not available, hide Channel Name on OSD and show Channel Name in place of Current Program Name in the style of Current Program Name.
4. In case EPG of channel is not available, instead of EPG on the OSD, write "TV Guide is currently not available" as shown in EPG-Not Available Box represented on the screen below and do not show "Complete TV Guide" button.
5. On this page, OSD background will be slightly transparent so that user can see what's behind.

- Name of Channel in Selection Window
- No Action

- Collapse OSD Icon
- Tap
- Show Touch Feedback and then proceed to page 3


- Date of Current Program
- No Action

- Logo of Channel in Selection Window. In case channel logo is not available, show product logo (Refer point 21 in Layout Elements > Content Carousel section) until channel logo becomes available
- No Action


- Start time and name of currently playing program
- Tap
- Show Touch Feedback and "play" if not already playing. If playing proceed to page 71

- Start time and name of all future programs upto next 7 days including current date (only upto content that can fit in the available area after reserving shown space for button). In case any program here starts after date of current program, show message after program name as shown
- Tap
- Show Touch Feedback and proceed to page 50

- Button to see Complete TV Guide
- Tap
- Show Touch Feedback and proceed to page 81

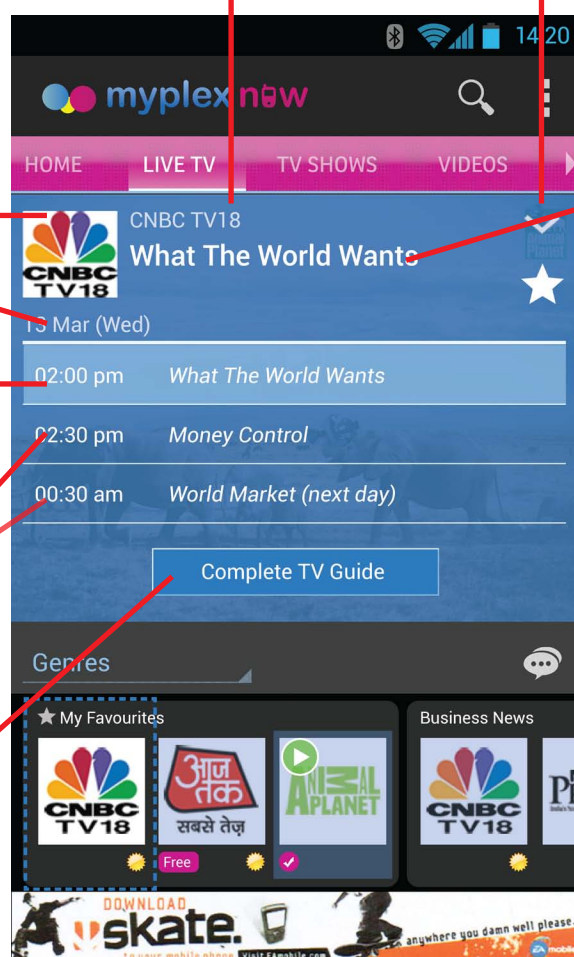

- Current Program Name of Channel in Selection Window
- No Action

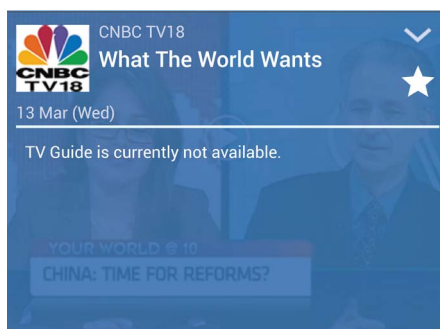

< EPG Not Available BOX