




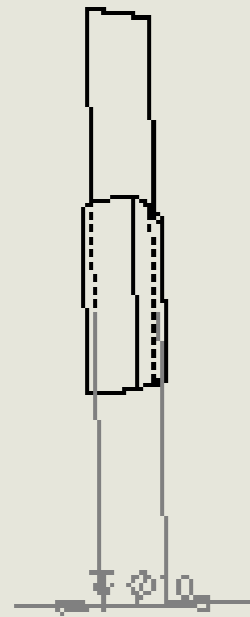

DETAIL B


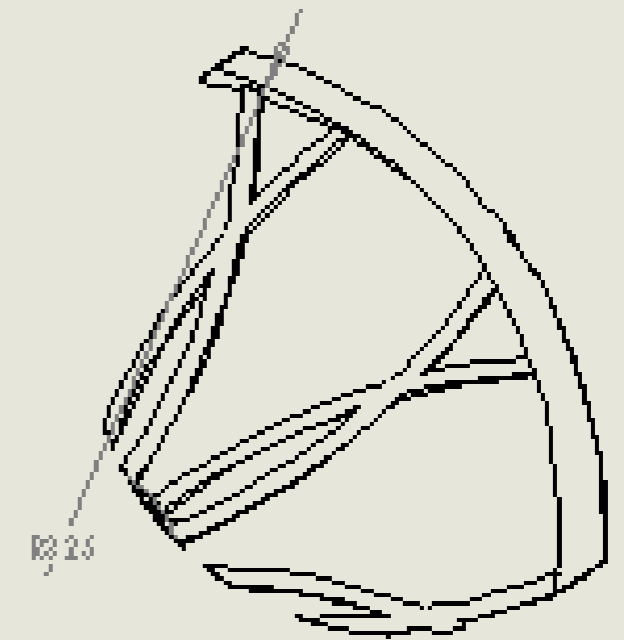


DETAIL D

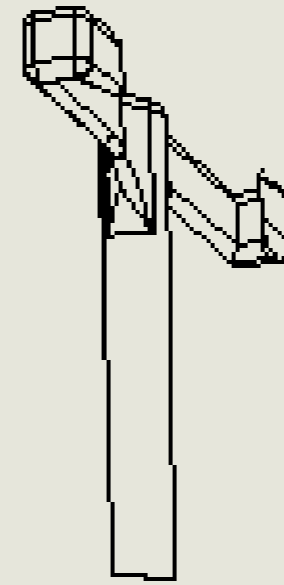

DETAIL C

Sizing varies from person to person due to adjustable height of both the seat and handle bars.

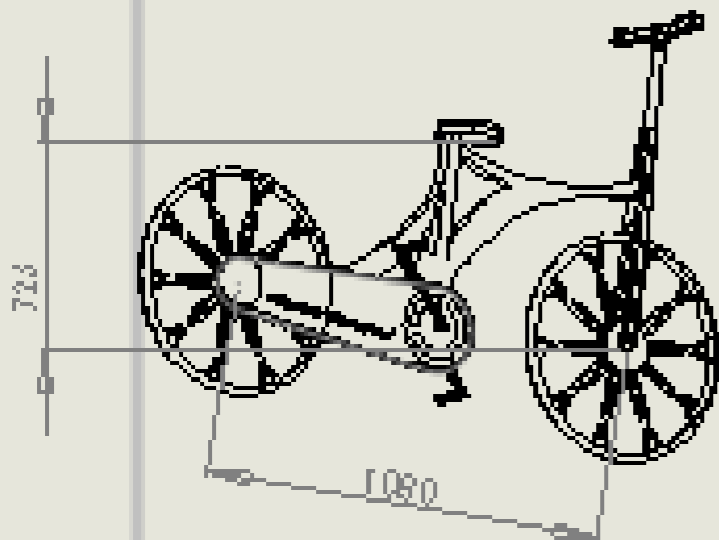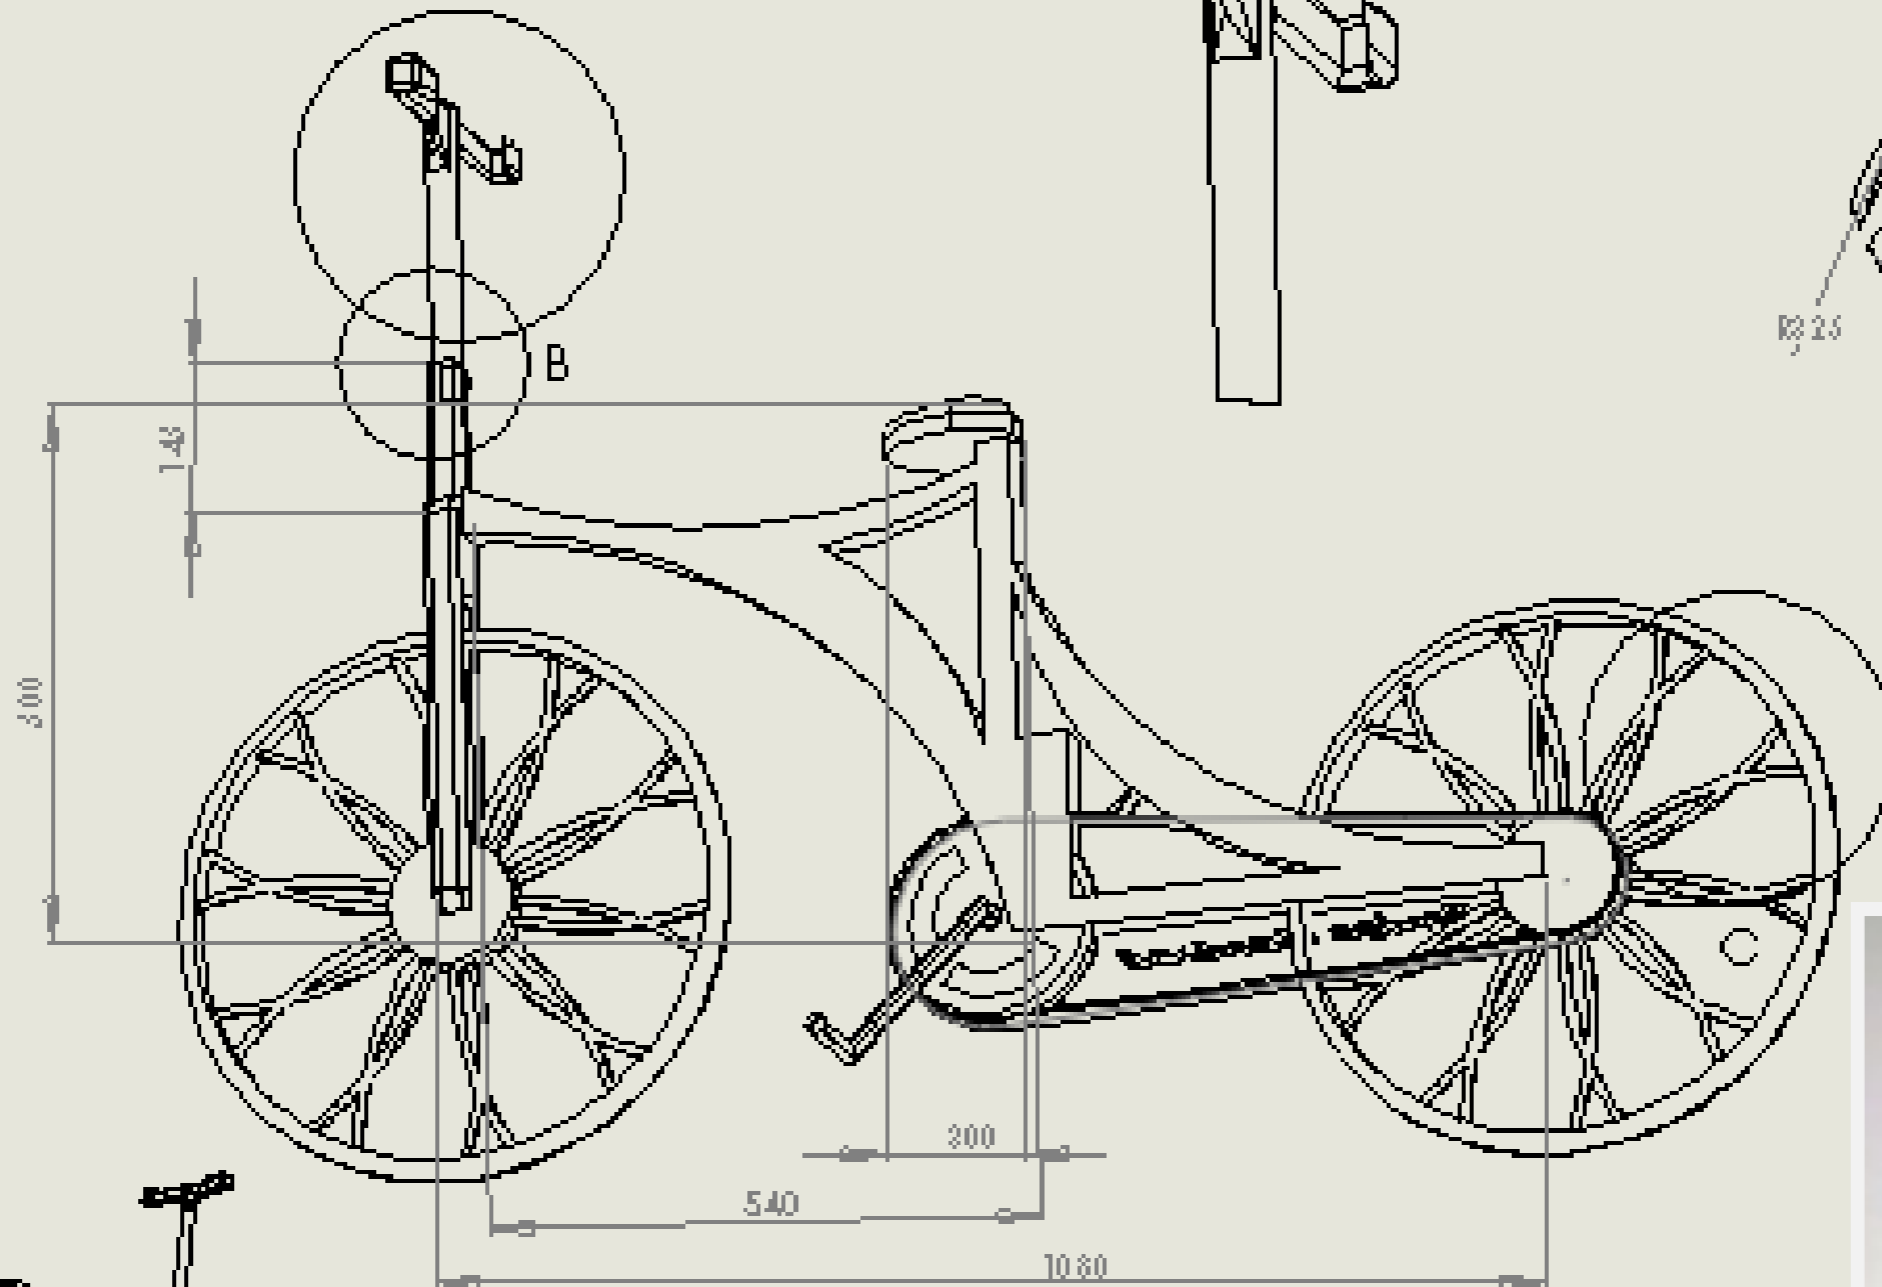

Simply remove the battery pack from under the seat and plug in to charge (using the portable power cable) at home, on the train/bus or at bus/train stations/ terminals.

Once charging the battery, simply sit back and enjoy the rest of your journey whilst the bike is neatly folded and stored in the luggage area.

To activate the motor whilst riding, press the activation button located on the handle bars.

