


FASTTrack PAPER PAK'R[®] Stand Assembly

5mm Allen Wrench required

- 1** Install wheels on the base of the Stand. Be sure to put the wheels with brakes in the most accessible location.
- 2** Attach upright to base using four (4) 20mm button head screws.
- 3** Attach foot switch and power cables. Be sure to cross them over to the opposite hole (as pictured). Secure cable to Stand by pressing the cable stress relief up into the keyhole and tightening the threads.
- 4** Attach Roll Holder arm to Stand using four (4) 12mm button head screws through supplied holes. Tighten securely.
- 5** Attach gusset to bottom of Roll Holder Arm using two (2) 12mm button head screws in the top of each arm.
- 6** Attach each gusset to the base of the unit using one (1) 12mm button head screw in supplied hole.
- 7** Attach Control Box to Upright using three (3) socket head cap screws.
- 8** Attach Bow Head assembly to top of Stand using two (2) 20mm socket head cap screws.
- 9** Attach Machine to Stand as shown. Carefully place screws over slots and use four (4) additional 20mm socket head cap screws to secure Machine to Stand. Make sure the ground wire and computer cable remain accessible.
- 10** Attach Entrance Chute to Machine using four (4) socket head cap screws. Make sure the P15 computer cable is plugged into the Machine and threaded through the slot in the bottom of the Entrance Chute prior to securing it to the stand.
- 11** Plug in all appropriate cables into the control box according to the diagram shown here.

For Further Assistance
Call FPI Tech Support at 866-FPI-SUPP(ORT)

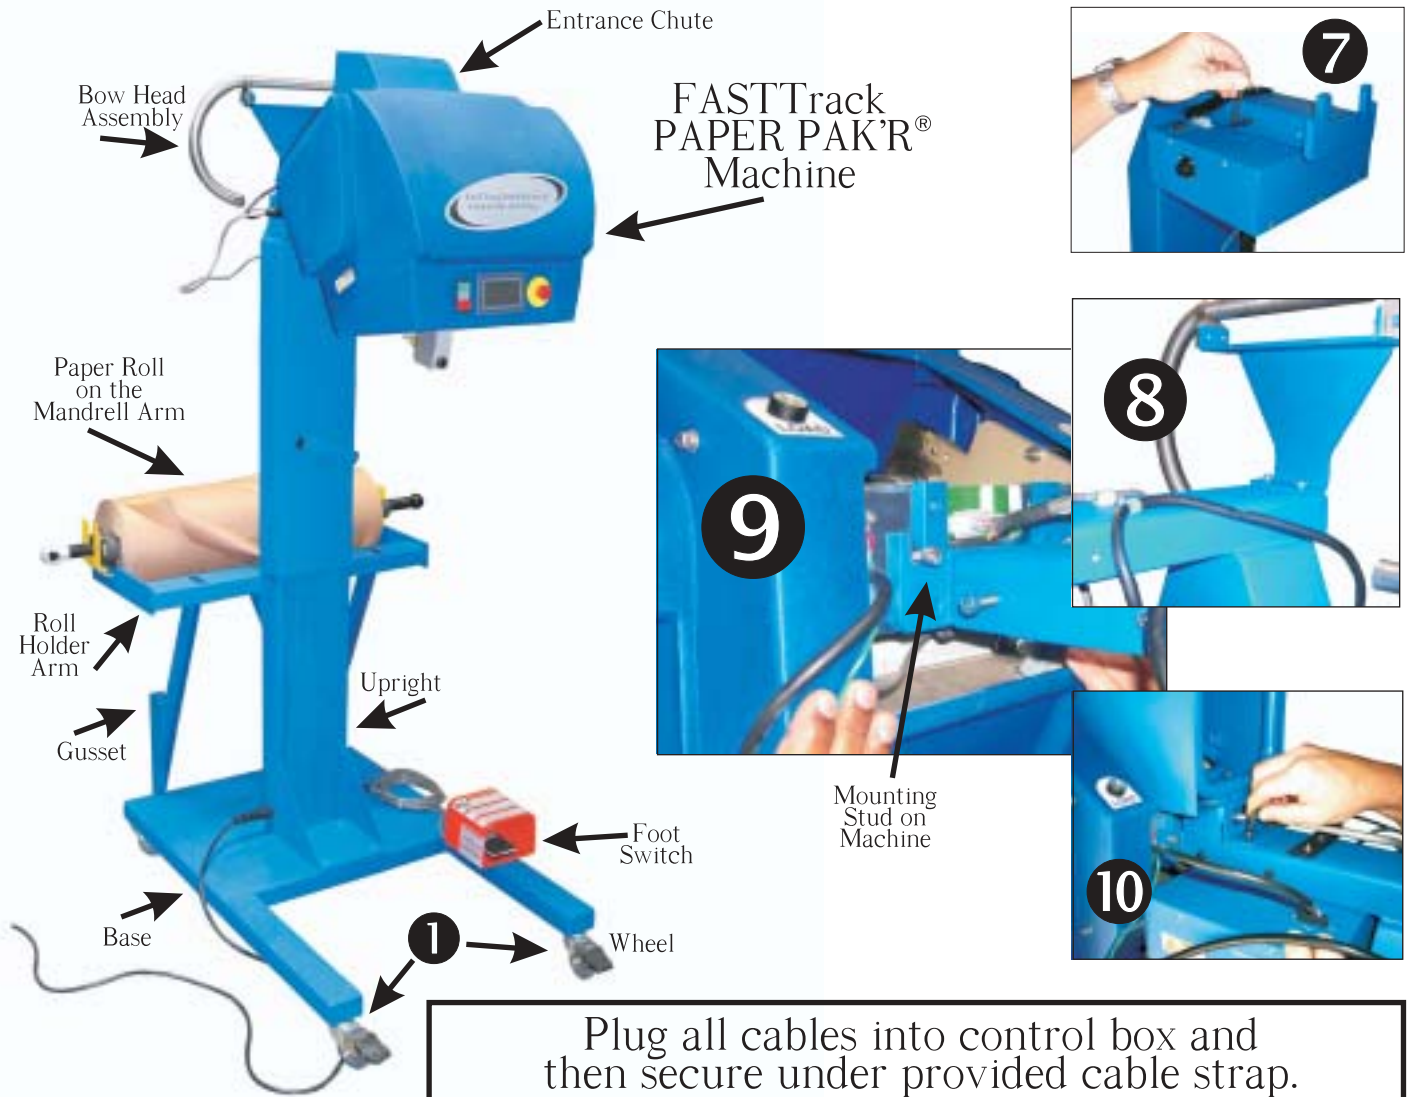

Plug all cables into control box and then secure under provided cable strap.

