
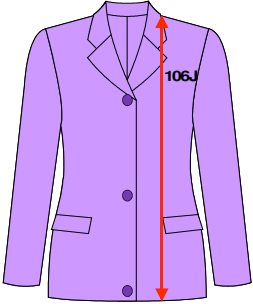
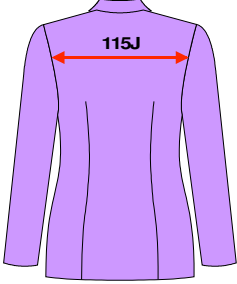
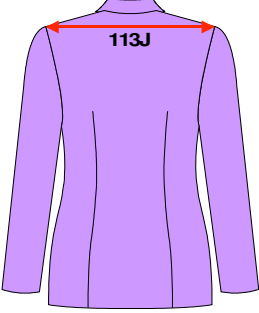


Concept		Measurement Specification Worksheet			S11CLG101		NMcGowan		
Senior Project	Style	S11CLG101	Folder Description	Sleeveless flare blouse					
None			Folder Status By						
None	Fabric Content 1	59% Cotton, 37% acetate, 4% viscose	Date Folder Created	12 JAN 2011 03:34 PM					
Spring 2012	Fabric Content 2		Date Folder Modified	31 JAN 2011 05:48 PM					
106	Front Length HPS- hem	Lay garment flat with front facing you. Measure from high point of shoulder at natural shoulder and neck seam straight to bottom of garment.				115	Across Back- 5" HPS	Measure from high point shoulder where natural shoulder seam and neck seam meet down a specified amount of ". From this point, measure straight across armhole to armhole.	
113	Across Shoulder	Lay garment flat with the back facing you. Measure from armhole seam and shoulder seam meet straight across from point.				118	Across Chest- 5" HPS	Measure from high point shoulder where natural shoulder seam and neck seam meet down a specified amount of ". From this point, measure straight across armhole to armhole.	