


# ARMORSKIN™

BALLISTIC VEST COVER SYSTEM




## STEP 1

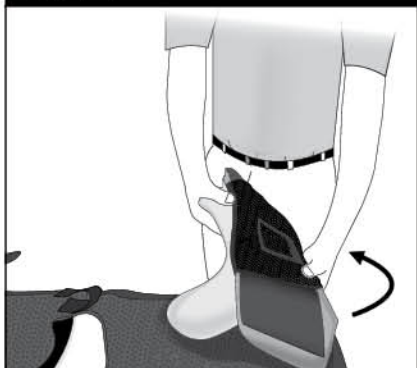


Lay ArmorSkin™ face down on a flat surface and fold body armor in half vertically or horizontally with armor plate pocket on bottom.

## STEP 2

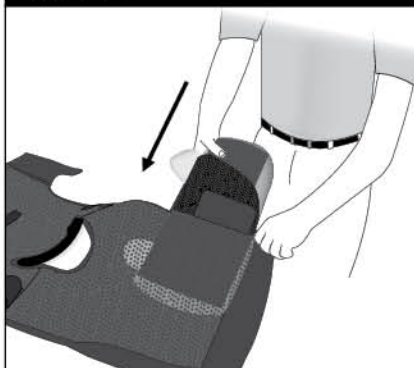

Insert folded armor carrier into mesh side opening on backside of vest skin (front and back).

## STEP 3

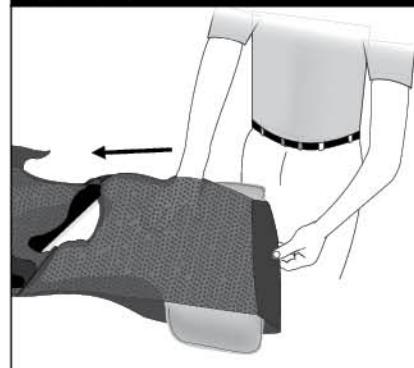

Flatten armor carrier inside of vest skin.


## STEP 4



Secure factory carrier shoulder straps using the opening in shoulder of vest skin by pulling the shoulder velcro through it.

Connect front and rear of installed carrier and panels using carrier straps to the original factory settings.

## STEP 5

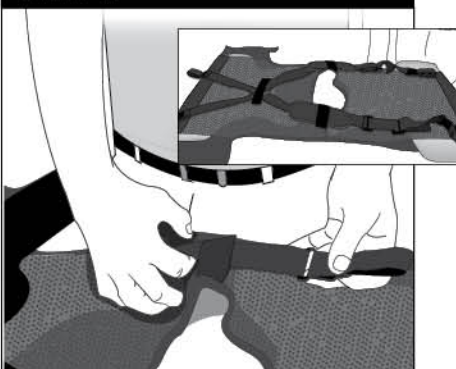


**OPTIONAL SUSPENDERS.** With ArmorSkin™ opened flat, pass the straps of the Suspension System through shoulder fastener and through ribbon on inside back. Position so they are even with the shoulders pads.

## STEP 6




Place ArmorSkin™ with installed carrier over head and shoulders.

## STEP 7

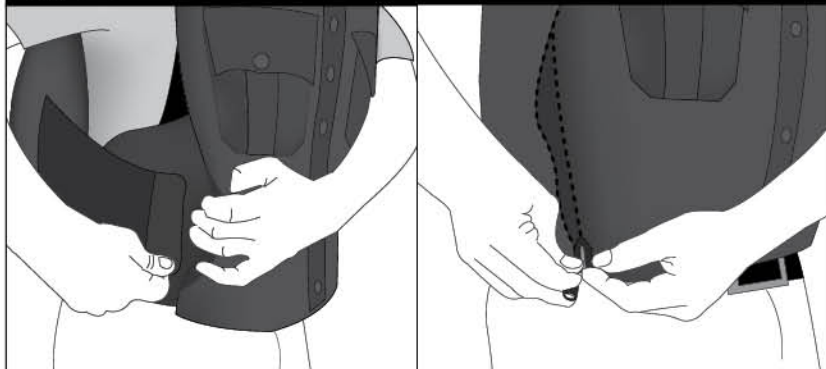

With ArmorSkin™ on, adjust side straps of carrier to the original factory setting for proper side overlap and zip ArmorSkin™ closed.

## STEP 8

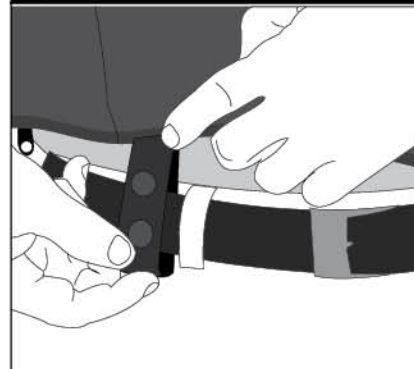

If using the integrated Suspension System, fasten keepers to duty belt and adjust tension to distribute weight of belt evenly over shoulders.

**When properly inserted into the ArmorSkin™ your vest carrier should be assembled and positioned on your body as prescribed by the body armor manufacturer's user instructions. You must verify proper fit prior to use. Failure to do so may cause injury or death.**