



Step 1
Locate the unit and pre-fold all folds.




Step 2
Flip the unit upside down and push open. Fold the bottom tabs down and inward. Fold the front and back bottom tabs down and lock into the side tab slots.




Step 3
Flip the unit upright.



Step 4
Locate the interior structure filler and push open.

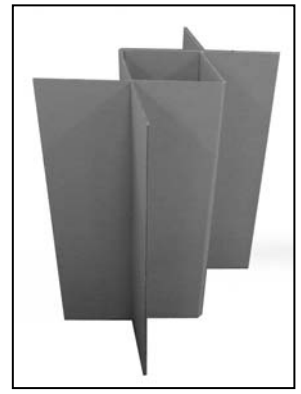

Step 5
Insert the interior structure filler into the unit as shown. Fold the unit's side tabs down and inward as shown.

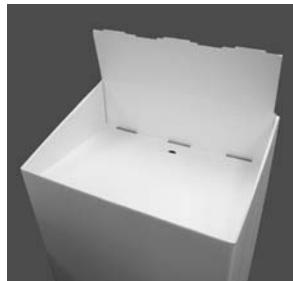

Step 6
Fold the front tab up into the unit, pushing down, creating both front lip and floor.



Step 7
Fold the back tab down and push to secure the tabs into the floor.



Step 8
Locate the header and pre-fold all folds.



Step 9
Fold the side and tabs up and inward.



Step 10
Fold the front panel up, over and into the header. Secure by locking the tab into the back slot.



Step 11
Place the header onto the unit. Lock into place by lifting the tab from the unit into the header slot.



Step 12
Locate the clear pocket holder.



Step 13
There are 4 pieces of pre-installed tape on the header. Un-peel the tape and align the clear pocket with the graphic blue line. Press to secure into place.



Completed Unit