

PILLOWCASE Front Back TUBE SEAM -LYCRA **LINER & COVER BUILD SECTION**

PARTS LIST

- 2 LINER(S)
- 2 COVER(S)
- SET UP DRAWING
- 1. PLACE THE LINER AROUND THE BASE OF THE FRAME W/ THE ZIPPERS TOWARDS THE TOP & SIDE OF THE FRAME.
- 2. PULL THE FABRIC UP AROUND THE FRAME USING SMOOTH AND EVEN
- 3. ALIGN THE OPENINGS IN THE LYCRA WITH THE EYEBOLTS ON THE FRAME.
- 4. START ALL THE ZIPPERS, CLOSING ABOUT 3" TO TO ENSURE EVEN TENSION AROUND THE FRAME.
- 5. ADJUST FABRIC EVENLY AROUND THE FRAME.
- 6. GENTLY COMPLETE THE CLOSURE OF THE ZIPPERS.
- 7. REPEAT THE SAME PROCESS FOR THE COVER.

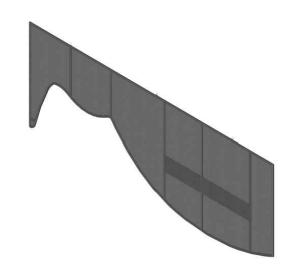

ASSEMBLED VIEW w/ FABRIC

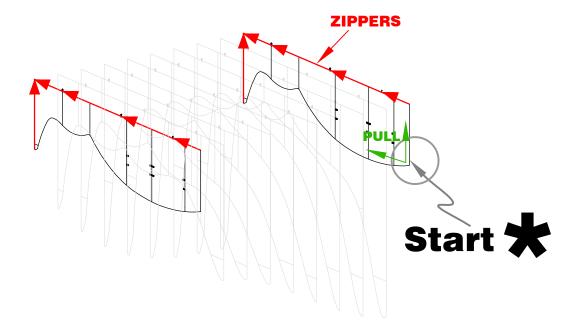

ZIPPER DIRECTION(S) VIEW


LINER & COVER



To Avoid Broken Zippers & **Torn Fabric:**

PULL ALL FABRIC ONTO THE FRAME EVENLY BEFORE STARTING ZIPPERS.

START ALL ZIPPERS BEFORE COMPLETELY CLOSING TO ASSURE EVEN TENSION.

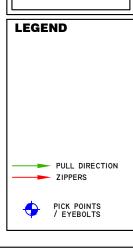



3400 WEST LAKE AVENUE GLENVIEW, IL 60026 P 847.564.5033 F 847.564.5430 WWW.DIMENSIONDESIGN.COM

Hamilton Exhibits BO

METAL ENG

ΑD

Stella Artois 20' W x 5'3" H Fabric Set-Up J71099 **A1**

UPDATE: **12.08.16**

SHT. F1-A1 of 1