


TECKPACK MANUAL

- > LABEL AND HANG TAG
- > LABEL AND HANG TAG PLACEMENT
- > HANGER TAPE AND DETAILS
- > CARE LABEL
- > HANGER AND POLY BAG
- > PACKING INSTRUCTIONS


GYPSY LABEL

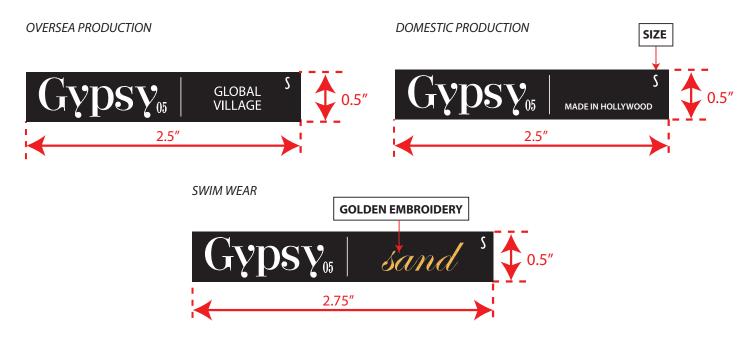

- > White embroidery logo on black background for all Gypsy label
- > 2.5" X 0.5" for Gypsy Men and Women label
- > 2.75 X 0.5 for Gypsy Sand
- > 2 ends fold or clean finish

HANG TAG

*Hang tang with 1/16" back twisted rope hung through label

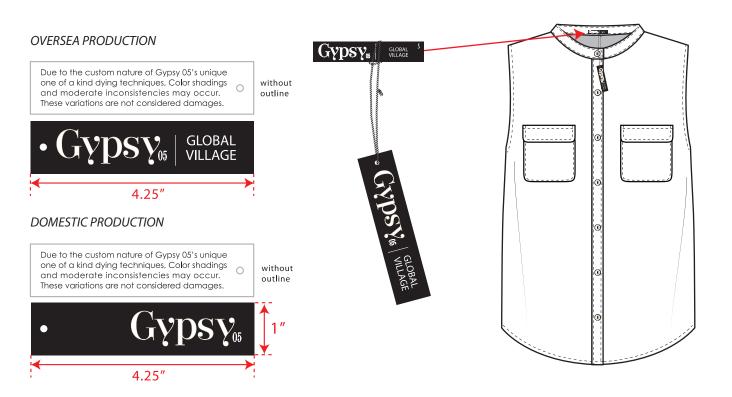

LABEL AND HANG TAG PLACEMENT



Shirt/Jackets: bottom of label align to bottom stitch line on collar/collar stand. Use black for top thread and bottom thread should be matching to self fabric color.

T-shirt/Dress/Boatneck/Regular Neckline: top of label align to bottom stitch line/2nd stitch line of bias/rib/binding. Use black for top thread and bottom thread should be matching to self fabric color.







Pant/Skirt: label align to bottom of waistband. Use black for top thread and bottom thread should be matching to self fabric color.


Elastic waistband/smocking: tack 2 top corners of label to the fabric DO NOT SEW ONTO ELASTIC. Please leave some room for the elastic to stretch.




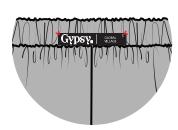

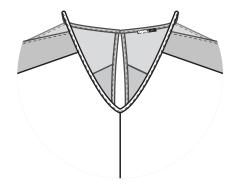

Back neckline with CB keyhole/slit/zipper: place label on left panel, 1" away from keyhole/slit/zipper edge



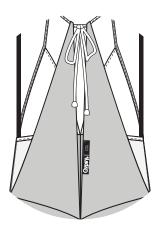

LABEL AND HANG TAG PLACEMENT

SWIM






SWIM RUBBER LABEL




- *Rubber main Gypsy label use on swim suits.
- *Gypsy 05 Coins are tacked on left trap point for top, and top waist, 1" from side seam for bottom.
- *Rubber main label measure: 2" x 0.375"

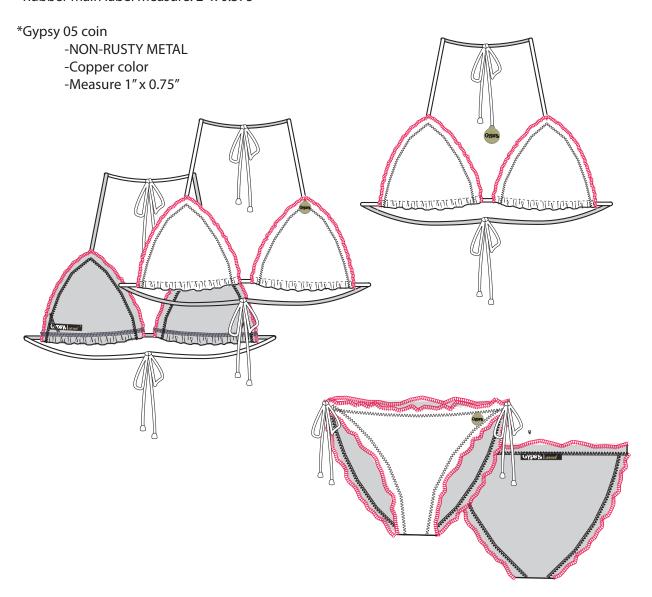

HANGER TAPE AND DETAILS


HANGER TAPE:

- *Hanger tape is 3/8" in width
- *Length should be from top of side seamto top of strap
- *Length on strapless/tube dress shouldbe 4" on double
- *Sewn at top of side seam, toward sweep (hanger tapeshould not stick out when worn)

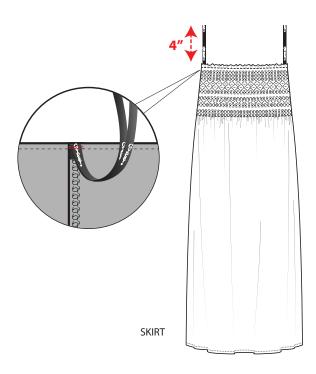





PACKING DETAILS

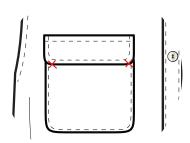

Hand tack pocket flap corners to keep it flat during packing and shipping (should be easily remove) DO NOT TACK ON GEORGETTE STYLE.



Close stitch well pocket opening with long stiches (should be easily remove)

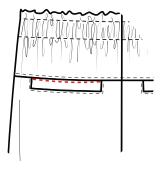

Drap each bead in paper to prevent damages

PRICE TAG PLACEMENT

- *On silk CDC/Georgette/Clean finish knits garment: have the price tag tacks to main label.
- *On knits garments: price tag ONLY GOES THROUGH overlock seams
 - -T-shirt: at the left sleeve opening.
 - -Knits tank top/shoulder strap dress: on left armhole.

*Pants:

- **-Waistband with elastic:** price tag place at back rise, under waistband.
- -Twill/Men pants: price tag place at side seam, under waistband.


USE 3" CLEAR BULLET









HAVE PRICE TAG GOES THROUGH OVERLOCK SEAMS ON KNIT GARMENTS

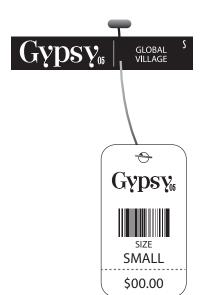




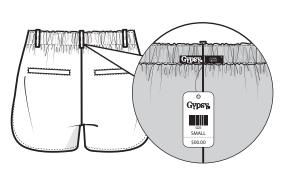

PANTS WITH ELASTIC WAIST

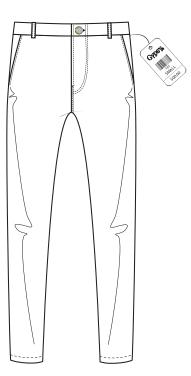

MEN PANTS

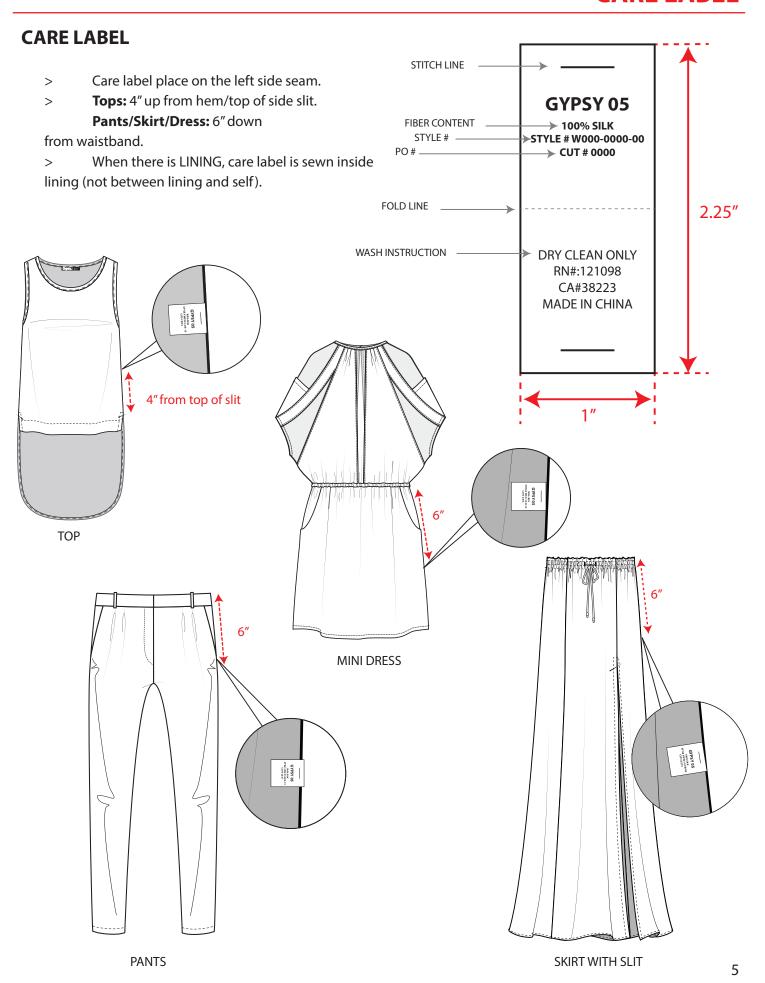

HANGER AND POLY BAG

HANGER:

- *Swivel 17" standard plastic hanger (must be clear color).
- *Regular hanger for tops and tanks, and dress
- *Use hanger with clip for pants, and swimwear.
- *Insert sponge on each clip to prevent damage to garment.

PLASTIC GARMENT BAG:

Poly garment bag

*Use poly garment bag when ship on hanger.

*Garment bag measure

-Small: 54" x 19"

-Medium: 42" x 19"

-Large: 72" x 19"

Poly bag with self adhesive

*When garments ship on fold

*Bag measure

-small: 10" x 12" -big: 12" x 16"

*Gypsy05 logo and Gypsy05.com in red on front bag.

*Warning in 3 languages: English, Spanish, and French on

the back side of bag

*Place sticker on the top right corner, the sticker needs to includes: style #. color, and size

POLY BAG WARNING INFO:

*WARNING N 3 LANGUAGES: ENGLISH, SPANISH, AND FRENCH ON THE BACK SIDE OF POLY BAG


WARNING: TO AVOID DANGER OF SUFFOCATION, KEEP AWAY FROM BABIES AND CHILDREN, DO NOT USE IN CRIBS, BEDS, CARRIAGES OR PLAYPENS. THIS BAG IS NOT A TOY

SPANISH:


AVISO: PARA EVITAR DE ASFIXIA, MANTENER FUERA DEL ALCANCE DE LOS NINOS Y DE LOS BEBES, NO USAR EN CUNAS, CAMAS, CARRIOLAS O CORRALES ESTA BOLSA NO ES UN JUGUETTE

FRENCH CANADIAN:

ATTENTION: POUR EVITER TOUT RISQUE DE SUFFOCATION GARDES A L'ECART DES BEBES ET DES ENFANTS NE PAS UTILISER DANS LES CRECHES, LITS, LANDAUS CE SAC N'EST PAS UN JOUET

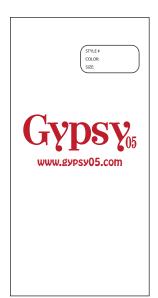



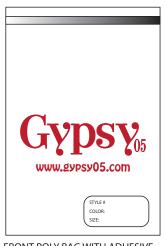







BACK POLY BAG WITH ADHESIVE

PACKING:

- * SHIP ON HANGER FOR SILK GARMENTS. Use plastic garment bag on each garment
- *SHIP ON FOLD FOR KNITS OR ON SPECIAL ORDER. Insert paper in between when fold.
- *Wrap each bead with paper to prevent damage
- * When packing:
 - **On hanger**, lay EVERY OTHER PIECE IN SAME DIRECTION
 - **_On fold,** place every piece on the same direction, divide to 2 stacks

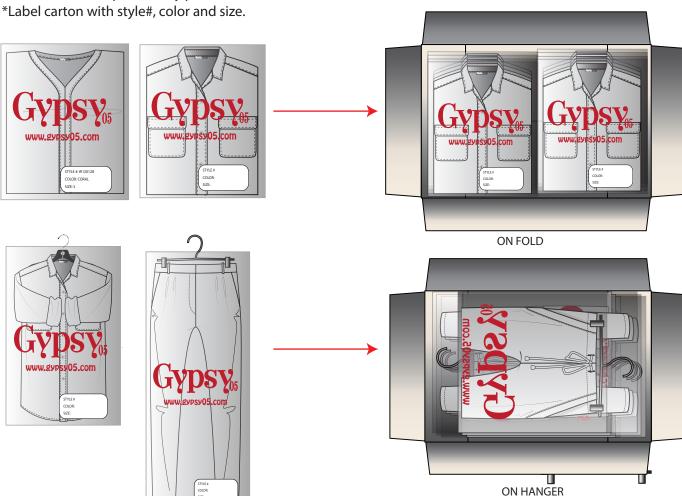

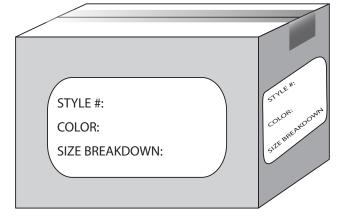

*You may use your standard export carton.
*Please try shipping per style, per color. Please place a sticker including style #, color, size break down, PO#, and vendor.

*The stickers must be place on all 4 sides of a carton.

*PLEASE DO NOT MIX STYLES